




Dell Inspiron 8600 Cooling Fan Replacement

This guide will show you how to remove and replace the cooling fan.

Written By: John Nesthus

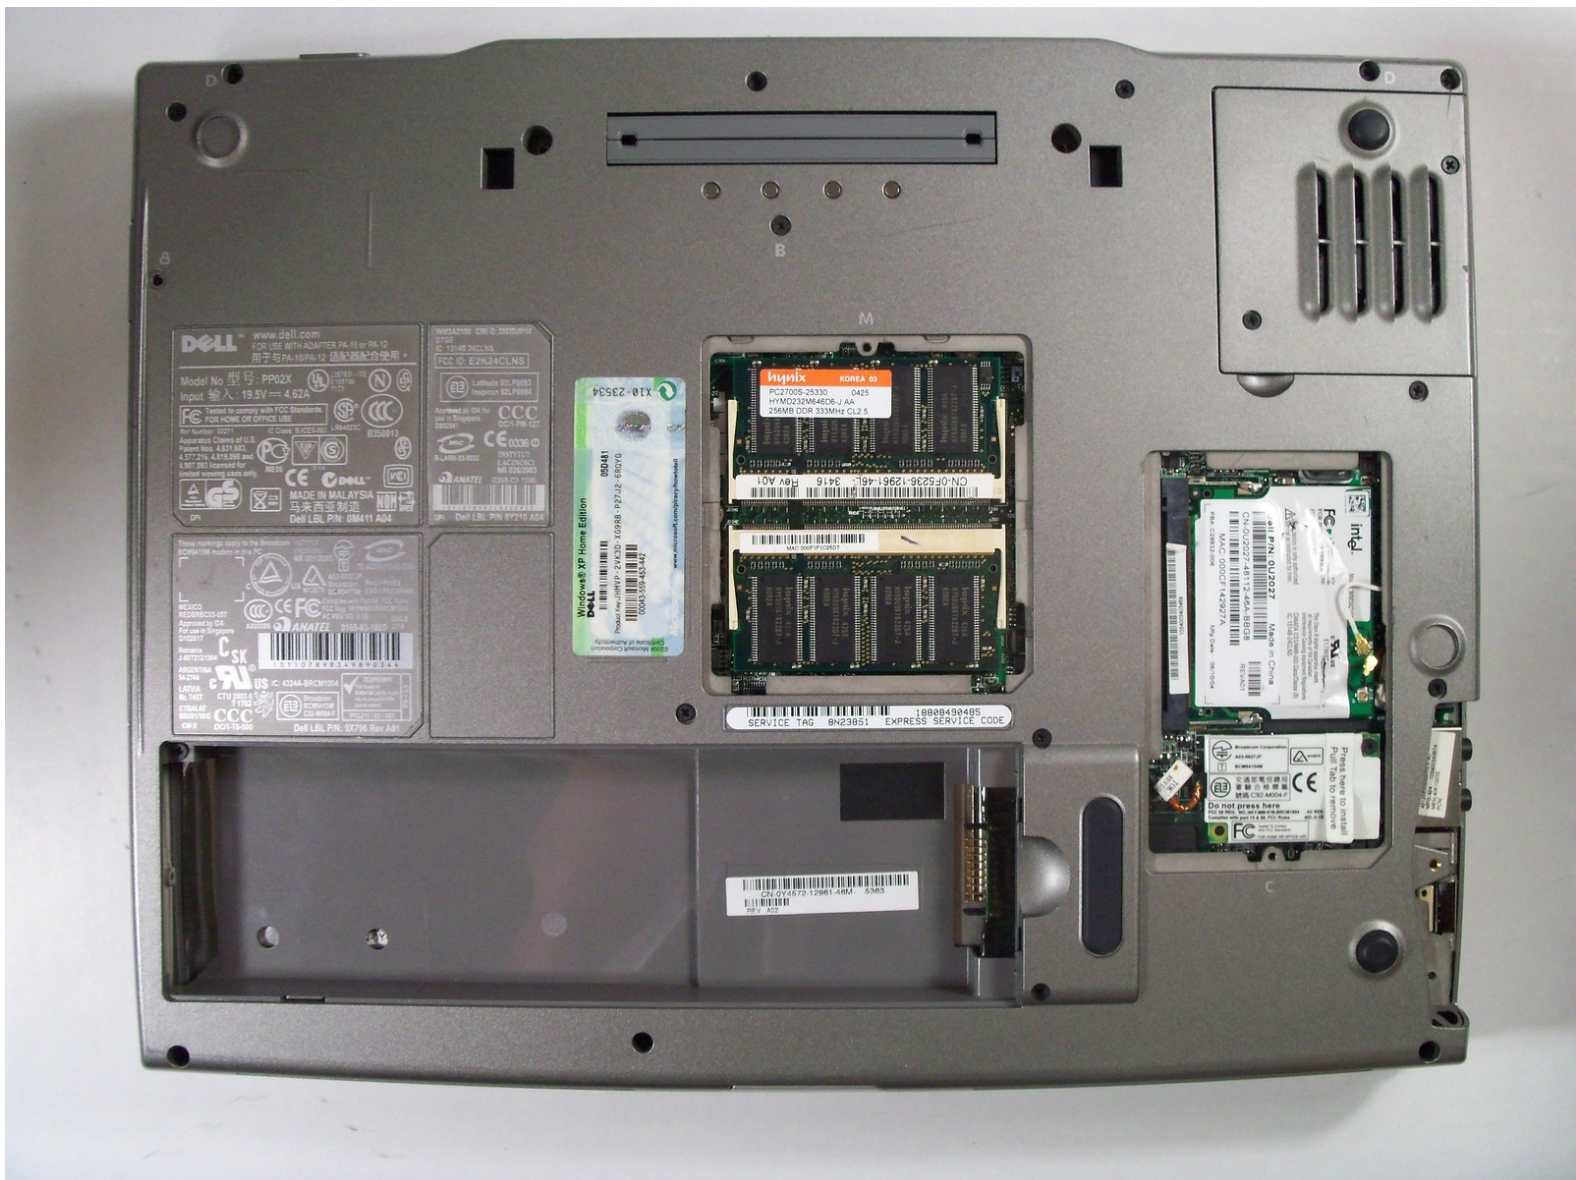

INTRODUCTION

First you must remove the hinge cover than keyboard lower case and finally have access to the cooling fan.



TOOLS:

 
- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — Battery



- Remove the battery from the bottom of the laptop.
- Please click on the following link for further instruction on how to remove the battery. [Dell Inspiron 9100 Battery Replacement](#)
- ⓘ It is important to remove the battery so that you will not be electrocuted while working with the computer's hardware.

Step 2 — Cooling Fan

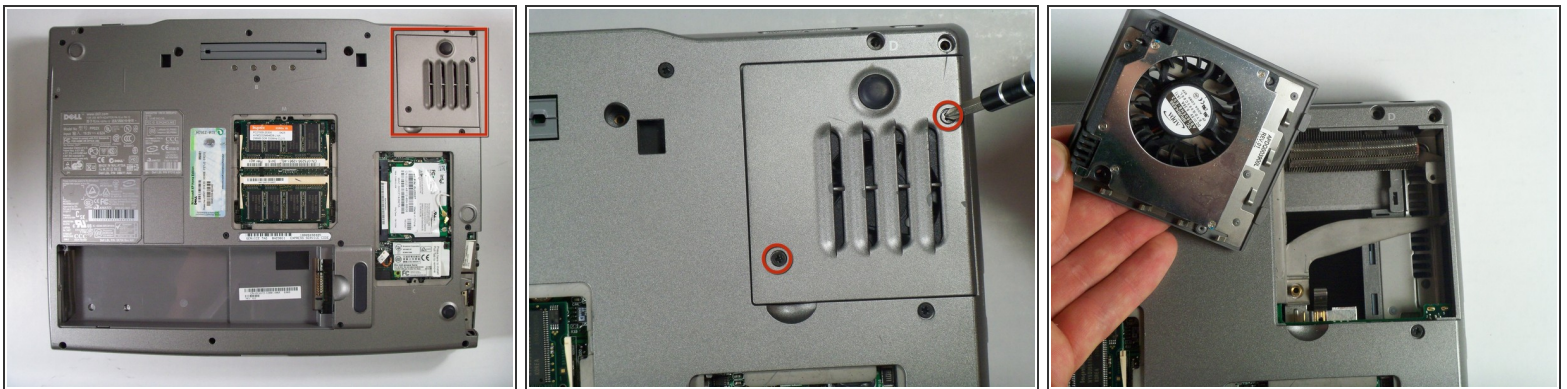

- Remove the screws on the top right of the bottom of the laptop.
- Once screws are removed, the fan can easily be slid out of its position.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-19 10:48:55 PM.